

# Support guide

## Setting up your BeTalk telephone adapter



In the quickstart guide they will refer to your BeTalk Phone Adapter as a Grandstream HT801 telephone adapter.

1

Plug your handset into the green 'TELEPHONE PORT' on your ATA device. If you don't have a standard socket, you may require an RJ11 adapter.

2

Take your network cable and plug it into the blue 'NETWORK PORT' on your ATA device.

3

Plug the other end of your network cable into a LAN port on the back of your router.

4

Plug the power adapter into the ATA and your wall socket, and turn it on.

5

Once the Power, Ethernet, and Phone LEDs on the top of the ATA are solidly lit, your ATA is ready for use



## Something not working?

If you have any problems, please contact our support team:



0330 088 83 83



[support@be-fibre.co.uk](mailto:support@be-fibre.co.uk)

Mon-Fri: 8:30-18:00 Sat: 8:30-13:00

For support outside of our opening hours, please visit [be-fibre.co.uk](http://be-fibre.co.uk)

# BeFibre<sup>®</sup>

Broadband as it should Be<sup>™</sup>